
Qashqai + 2 (J10 / NJ10) - fuses - fusibles

Autor:

Data de publicació: 11-12-2019

Nissan Qashqai / Qashqai + 2 (J10 / NJ10) de primera generación, producido de 2006 a 2013. Aquí encontrará diagramas de caja de fusibles de Nissan Qashqai 2007, 2008, 2009, 2010, 2011, 2012 y 2013, obtenga información sobre la ubicación de los paneles de fusibles dentro del automóvil y conozca la asignación de cada fusible (disposición de fusibles) y relé.

Nissan Qashqai-Qashqai+2 (J10/NJ10; 2007-2013) fuses and relays

Passenger compartment Fuse box

The fuse box is located on the left (on the right, in RHD-vehicles) under the steering wheel, behind the cover.

Fuse box diagram

Assignment of the fuses in the passenger compartment

?AmpComponent

R1

Ignition auxiliary circuits relay

R2

Heater blower relay

F1

10A

Heated seats

F2

10A
Air bags

F3
20A
Steering column function control module

F4
10A
Electrics

F5
10A
Interior electrical control unit

F6
10A
Heated door mirrors

F7
15A
12 V socket (rear)

F8
10A
Electrics

F9
10A
Interior electrical control unit

F10
20A
Not used

F11
10A
BPP switch

F12
15A
Audio system

F13
15A
Transmission control module (TCM)

F14

-
Not used

F15
15A
AC/heater blower motor

F16
15A
AC/heater blower motor

F17
10A
Not used

F18
-
Not used

F19
15A
Cigarette lighter/charging socket

F20
10A
Audio system, electric exterior mirrors

Fuse Box in the Engine Compartment

The fuse boxes is located in the engine compartment (left-side)1) Fuse Box 1
2) Fuse Box 2

Fuse box diagram (Fuse Box 1)

Assignment of the fuses in the Engine Compartment Fuse Box 1

?AmpComponent

R1

Engine coolant pump motor relay

R2

Horn relay

R3

Headlamp washer pump relay

R4

Not used

FF
60A
Power steering

FG
30A
Headlamp washers

FH
30A
ABS

FI
40A
ABS

FJ
40A
Not used

FK
40A
Ignition switch

FL
30A
Not used

FM
50A
Engine coolant blower motor

F31
20A
Engine coolant pump motor relay

F32
10A
Four wheel drive system

F33
10A
Attenuator

F34
10A
Horn

F35
30A
Auxiliary heater

F36
10A
Not used

F37
30A
Auxiliary heater

F38
30A
Auxiliary heater

Fuse box diagram (Fuse Box 2)

Assignment of the fuses in the Engine Compartment Fuse Box 2

?AmpComponent

R1

Heated rear window relay

R2

Not used

R3

Not used

R4

Ignition main circuits relay

F41
15A
Defrost the tailgate, heater mirrors

F42
15A
Defrost the tailgate, heater mirrors

F43
15A
Front fog lamps

F44
30A
Wind screen wipers

F45
15A
Headlamp low beam, right

F46
15A
Headlamp low beam, left

F47
10A
Head lamp high beam, right

F48
10A
Head lamp high beam, left

F49
10A

Lamp tail lights

F51
15A
transmission

F52
20A
Engine management

F53
10A
A/C compressor clutch

F54
10A
Reversing lamps

F55
10A
Transmission

F56
10A
Engine management

F57
15A
Engine management

F58
10A
Engine management

F59
10A
ABS